


HOW TO CALIBRATE A THERMOMETER

Thermometers should be calibrated regularly to make sure the readings are correct. The ice-point method is the most widely used method to calibrate a thermometer.


Using the Ice-Point Method to Calibrate a Thermometer

1

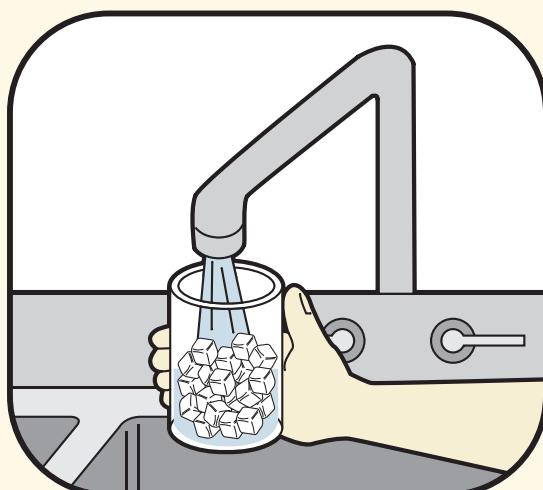


Fill a large container with crushed ice. Add clean tap water until the container is full. Stir the mixture well.

2

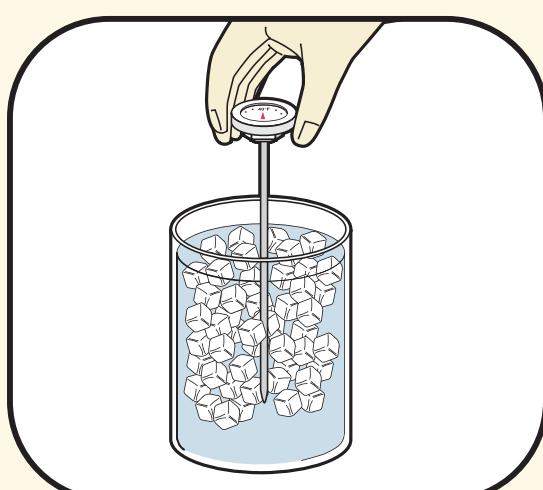

Put the thermometer stem or probe into the ice water. Make sure the sensing area is under water. Wait 30 seconds or until the reading stays steady.

3

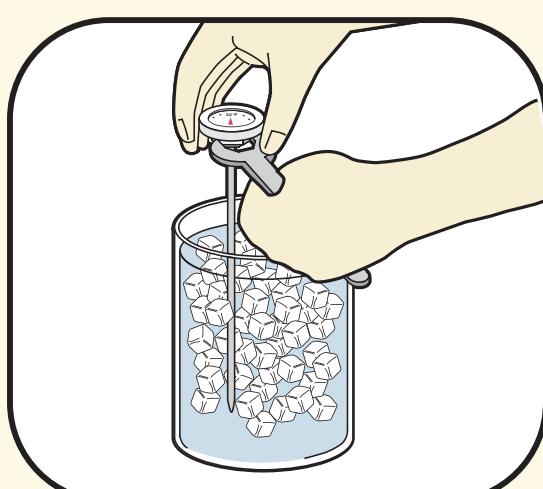

Adjust the thermometer so it reads 32°F (0°C). Hold the calibration nut securely with a wrench or other tool and rotate the head of the thermometer until it reads 32°F (0°C).



© 2008 National Restaurant Association Educational Foundation. All rights reserved. Not for individual sale. Reproducible for instructional use only by permission of National Restaurant Association Solutions.

The ServSafe logo is a registered trademark of the National Restaurant Association Educational Foundation, and used under license by National Restaurant Association Solutions, LLC, a wholly owned subsidiary of the National Restaurant Association.

08071801 (No. 5—Grey) v.0809



www.ServSafe.com